



www.hilti.com

Icons: Person with laptop, Safety glasses, Hand with glove

1

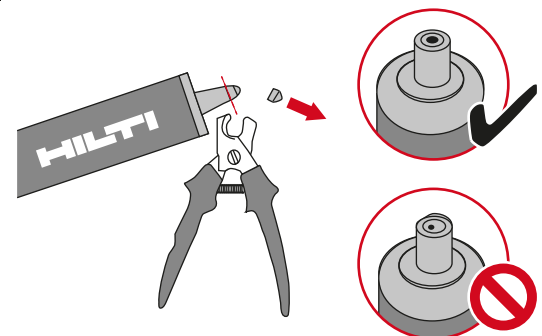


Diagram showing the removal of the cap from the cartridge using pliers. A red line indicates the correct cutting point. Two circular insets show the correct (top) and incorrect (bottom) cutting methods.

2

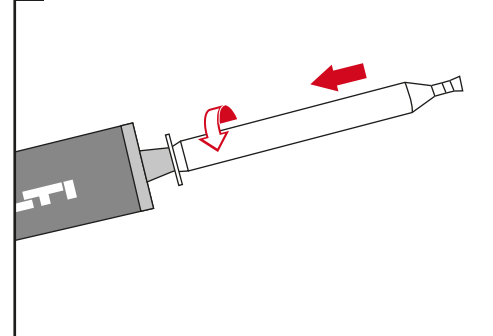


Diagram showing the cartridge being inserted into the foam dispenser. Red arrows indicate the direction of insertion and the rotation of the cartridge.

3

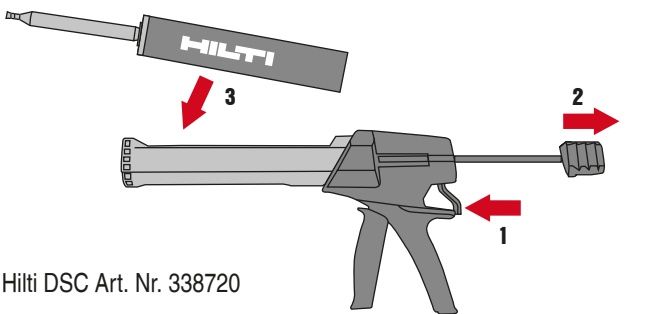


Diagram showing the Hilti DSC foam dispenser (Art. Nr. 338720) being attached to the cartridge. Red arrows 1, 2, and 3 indicate the steps: 1. Push the trigger, 2. Push the handle, 3. Push the cartridge into the dispenser.

Hilti DSC Art. Nr. 338720

4

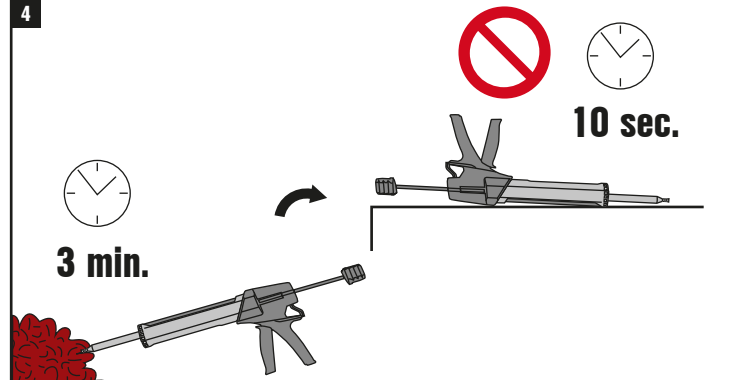


Diagram showing the foam dispenser being used to apply foam to a surface. A clock icon indicates a curing time of 3 minutes. A red prohibition sign and another clock icon indicate a waiting time of 10 seconds before using the surface.

3 min.

10 sec.